

## APPLICATIONS SUPPORTED:

- Predator DNC
- Predator MDC
- Predator PDM
- Predator CNC Editor
- Predator Virtual CNC
- Predator Tracker
- Predator Travelers
- Predator SFC
- Predator RCM



## FLOATING LICENSE MANAGER:

Reduce software cost with network licensing

## WHAT IS PREDATOR FLM?

Float one or more Predator software applications within your wired or wireless network to manage, control, and reduce licensing costs. Install Predator Software on an unlimited number of PCs, and only purchase the maximum number of concurrent licenses needed.

## WHY USE PREDATOR FLM?

- Save money by reducing number of licenses
- Manage client licenses with common/ghost images
- Eliminate SIMs/Dongles on the shop floor/client PCs
- Runs in the background 24/7 as a Windows Service

## HOW DOES PREDATOR FLM WORK?

Predator FLM is installed on a server or workstation that runs 24/7 and controls which PC has access to the Predator application. A license file contains the number of seats, licensed level and version of the product. The workstation "checks out" a license from the FLM and a log is produced by the FLM. The computer IP and product type is recorded and can be managed as needed. Predator FLM is controlled and licensed by a Predator USB SIM.

**NOTE:** Within a multiple plant installation, at least one Predator FLM Manager is required per plant or factory. Predator APIs require a fixed license and do not work with a floating license.



Shop Floor Automations, Inc.  
5360 Jackson Drive, Suite 202  
La Mesa, CA 91942-6003

**Phone:** (619) 461-4000  
**Toll Free:** (877) 611-5825  
**Fax:** (619) 461-5918

**Web:** [www.ShopFloorAutomations.com](http://www.ShopFloorAutomations.com)  
**Email:** [sales@ShopFloorAutomations.com](mailto:sales@ShopFloorAutomations.com)

